



HİDROFAST HİDROLİK PRES SANAYİ VE TİCARET LİMİTED ŞİRKETİ



User Manuel


Before starting the machine, put hydraulic oil into the oil tank.

Use 30 liters of number 46 hydraulic oil.


1. Adjustments should not be made while the press is running.
2. You should not put your hand between the tables while the press is operating.
3. Personnel working in the press must check the settings.
4. Wait for the press to stop before removing the processed piece.
5. The oil level of the hydraulic press should be checked before starting work and at periodic intervals during operation.
6. The pressure of the hydraulic press should be checked at regular intervals.
7. While the machine is operating, moving parts should not be touched and no foreign objects should be brought close to it.
8. Operators must use their protective equipment during and after work for whatever reason.

9. The area where the machine is located should not be left until the press stops.


10. Never operate without oil.

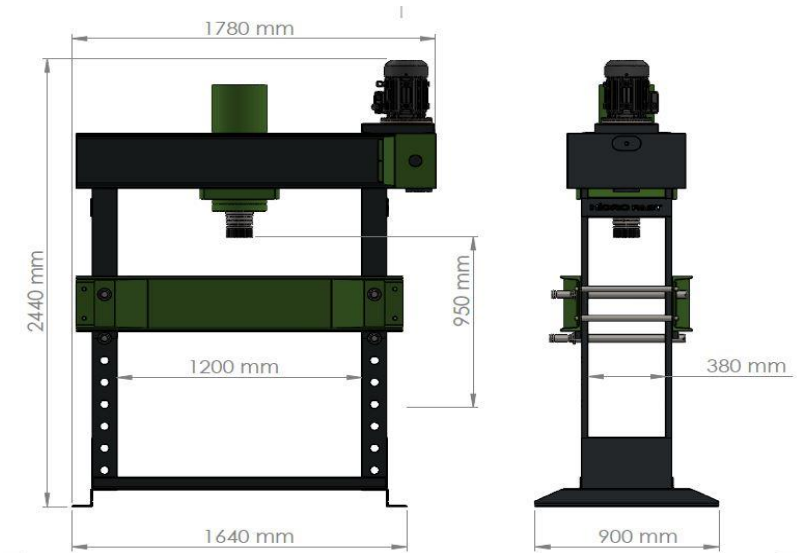

Electrical Diagram

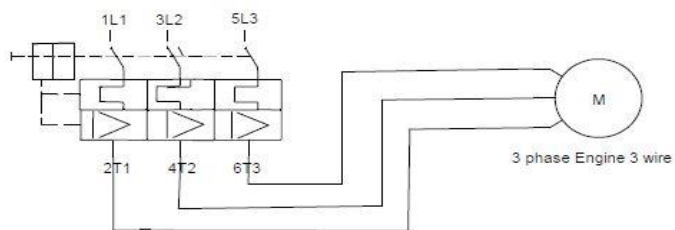

Hydraulic Diagram

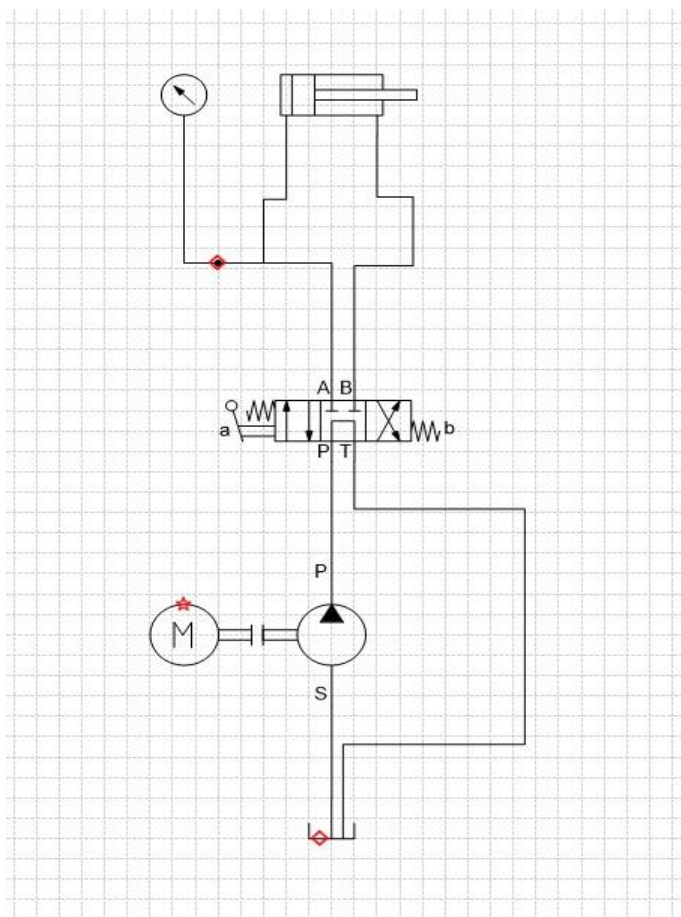

info@hidrofast.com/www.hidrofast.com

HIDROFAST